



# DOUBLE FROZEN BEVERAGE MACHINE INSTRUCTIONS FOR OPERATION


1. Once the bowl has been cleaned and sanitized, fill the mix tank with the desired liquid product (3 gallons maximum). Do not overfill the tank. **NOTE THAT WHEN READY, SLUSH OCCUPIES MORE VOLUME THAN THE LIQUID** (approximately 3.5 gallons of slush for 3 gallons of liquid).
2. If using natural products as a base (coffee, lemon juice, orange juice, etc.), it is required that 5 to 7 oz. of sugar per gallon be added. If using a concentrate, follow the instructions from the supplier. In general the mix ratio (sugar content) of the product solution (liquid mix) should not be less than 1:1.
3. To access switches and timer, open the switch panel cover by pushing on the side (arrow A) and pulling (arrow A') (Fig. 1). To close the cover (arrow B'), push on the front (arrow B) until the clear plastic part (1) snaps closed (fig. 3)
4. To operate, press main power switch and agitator switch to **ON** position (figure 1). **NOTE:** The agitator switch must be to **ON** position before setting to liquid or slush mode.

4.1 For slush, press the cooler switch to bottom position II/ 



4.2 For liquid, press the cooler switch to up position I/  If the machine is being used as a liquid cooler, it is provided with an inside thermostat for controlling the liquid temperature.

**Note:** The cooler switch is a three position switch and in order to have the compressor off, all the cooler switches need to be in the middle position.

5. To illuminate the mix tank cover display on top of the unit and the product in the bowl press the display light switch to down position I/ 






6. Controls: On the right side of the machine are the following switches

**Main Power** 

“0” Position: Off. Power is turned off to all functions.  
 “I” Position: On position. Machine has power.

**Agitator Switch** 

“0” Position: Agitator is off.  
 “I” Position: Agitator is on.

**Cooler Switch**    
 “0” Position: Off position   
 “I” Position: Cool drink mode.   
 “II” Position: Slush mode. 

**Display light** 

“0” Position: Lights are off.  
 “I” Position: Lights are on.

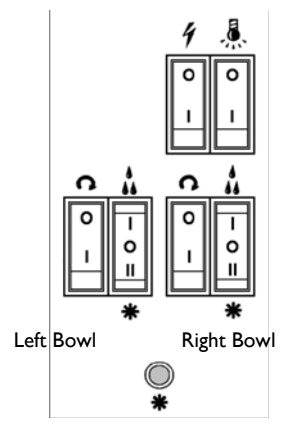



Figure 1

**Compressor green light** 

If the compressor green light is on, the compressor is working.

Please Note:

- Sugar level must be 12%
- Machine must be emptied of liquid & rinsed with clear water.

**LIQUID DENSITY ADJUSTMENT**

To adjust the density/consistency of the slush there is an adjustment knob (Figure 4, #2) at the rear, right corner of the dispenser (#1).

Turn the knob right (clockwise) or left (counter clockwise) (arrow C and B). The consistency indicator (#4) will go up or down (arrow D and E)

To firm up the product, turn the set knob counter clockwise, which will move the indicator down to a higher number position.

To soften / warm up the product, turn the set knob clockwise, which will move the indicator up to a lower number position.

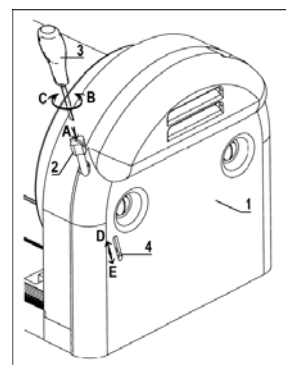


Figure 4

**CAUTION: IF THE MACHINE IS STOPPED AT NIGHT WITH ICE IN THE TANK,  
REMOVE ALL ICE SLABS BEFORE STARTING.**