



## **Aba Daba Rents**

4351 Auburn Blvd.  
Sacramento, CA 95841-4152  
(916) 484-7368 Fax (916) 482-2552  
www.abadaba.com

### **Sno Cone Machine**

#### **WARNING**

Do not allow children to operate or be unattended around the machine. Blades continue to turn even when the machine is not running. Never place hands or fingers in the gooseneck.

#### **SETTING UP**

##### **ELECTRICAL REQUIREMENTS**

This machine operates on 120 Volt, single phase, 60 cycle AC current. Be sure that your electrical supply meets this requirement.

##### **ICE REQUIREMENTS**

This machine can take ice cubes or block ice, if you break into pieces approximately 3 to 4 inches in size. **NOTE:** The ice will not enter the shaving chute if the pieces are too large. The design of the shaving chute automatically draws the ice against the blades. There is no need for manual effort.

##### **TO OPERATE THE SNO CONE MACHINE**

1. Switch the motor on.
2. Wait for the motor to come full speed (a minute or so).
3. Fill the gooseneck to within an inch of the top with ice no larger than 4". The larger the pieces, the batter the snow.
4. Push the pusher handle down against the ice in the gooseneck. Apply firm and even pressure to make the best snow. Practice will allow you to gauge when to stop pressing. This allows the ice to resettle against the cutter head. You may find that you need to relieve the pressure two or three times in a cycle. Over pressing will stall the motor. In this case, simply relieve the pressure and try again. Too much pressure will result in snow that is course; too little pressure will make the snow mushy.
5. Be aware that under normal operating conditions the motor will become very warm. A surface temperature of 150 degrees is normal.

**NOTE:** Never allow any foreign or metallic objects around the shave area of the sno cone machine. Blades are often damaged by ice picks and scoops, and debris that may be in the ice.