



Aba Daba Rents

4351 Auburn Blvd.
Sacramento, CA 95841-4152
(916) 484-7368 Fax (916) 482-2552
www.abadaba.com

SUCTION CUP

**Powr – Grip 8" Suction Cup
With Load Capacity of 125 Lbs.**

Environmental Conditions

Use on clean, relatively smooth, nonporous surfaces; in temperatures from 10° to 120° Fahrenheit; and at elevations not to exceed 5,000 feet. Moisture or contaminants can reduce the slip resistance of the cup.


Operation

To Attach:

1. Position the hand cup on the contact surface so the red line will be visible if it should appear while lifting the load.
CAUTION: Test the cup for staining or deformation on surfaces with light colors or soft coatings.
2. Pump the plunger until the cup attaches completely. When the red line is hidden, vacuum is sufficient for lifting.
3. Check the plunger frequently to make sure the cup remains securely attached. If the red line appears while lifting, set down the load immediately and pump the Plunger until the red line is hidden again (see **WARNINGS**).

To Release:

1. Set the load on a secure support.
2. Press the valve release lever until the cup disengages completely.

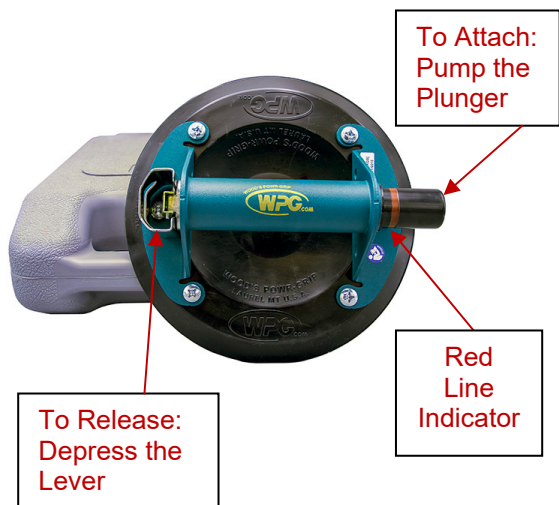

Cleaning

1. If the hand cup does not function normally, the cup face may be dirty.
2. Remove the air filter from the cup face.
3. Use a clean sponger or lint free cloth to apply soapy water or another mild cleanser to cup face.
CAUTION: To prevent liquid from contaminating the pump, hold the cup face – down or cover the suction hole.
4. Wipe all residue from the cup face.
5. Allow the cup to dry and reinstall the air filter.

WARNINGS

Failure to observe WARNINGS could damage the hand cup, load, or cause injury to the user.

1. **DO NOT** use the cup to lift loads that exceed the load capacity.
2. **DO NOT** use the cup to support a person.
3. **DO NOT** place the cup against surfaces which could damage the sealing edges.
4. **AVOID** conditions that could cause the cup to slip or to disengage prematurely, such as: contaminants, cuts or scratches in the cup face or mounting surface; applying the cup to porous materials; or applying pressure against the cup edge.
5. **DO NOT** use the cup when, the red line is visible.
6. **DO NOT** allow anything to interfere with movement of the plunger while the cup is attached.
7. **DO NOT** touch the valve release lever while lifting.
8. **DO NOT** use solvents, gasoline or other harsh chemicals to clean the cup.