



Aba Daba Rents

4351 Auburn Blvd.
Sacramento, CA 95841-4152
(916) 484-7368 Fax (916) 482-2552
www.abadaba.com

TILLER WARNINGS

WARNING: Customer must tie down unit for safe transport!

WARNING: Never refuel while unit is running and/or hot.

WARNING: Always wear hearing and eye protection while operating this tool.

WARNING: This item contains one or more chemicals known to the state of California to cause cancer, birth defects or other reproductive harm.

SAFETY INSTRUCTIONS

1. Do not leave tiller unattended with engine running.
2. The Safety Clutch lever on the left handlebar is for operator protection. **DO NOT TAPE DOWN OR OTHERWISE BY-PASS THIS CLUTCH.**
3. Objects may become airborne while operating tiller. Wear safety goggles and hardhat while operating or observing.
4. Rotating tines can cause serious injury. **KEEP HANDS AND FEET CLEAR!**
5. **KEEP TINE COVERS CLOSED** and **MACHINE LEVEL** while tines are operating.
6. Buried cables or gas lines can cause serious injury or death. Contact local agencies for location
7. Fuel exhaust and fuel fumes can cause illness or death. Operate outdoors and avoid breathing exhaust and fumes,
8. Fuel fumes can catch fire or explode. Do not smoke or operate near flames or sparks.
9. Hydraulic oil is under extreme pressure and can get under skin and or poison. Check for leaks with cardboard.
10. Muffler and engine get hot enough to cause serious burns. Do not touch until cool

OPERATING INSTRUCTIONS

1. **READ SAFETY INSTRUCTIONS BEFORE OPERATING!**
2. Be sure engine oil and hydraulic oil are at proper levels before starting tiller.
3. **STUDY AND UNDERSTAND CONTROLS BEFORE BEGINNING OPERATION.**
4. **NEVER RUN MACHINE IN REVERSE WHILE TINES ARE ROTATING.** Always move the tine control lever to "OFF" before reversing wheels.
5. Tine control lever should be set to "OFF" position when moving tiller from place to place while not tilling.
6. **CLUTCH LEVER:** (At left handle grip) Activates Wheel Drive and Tine rotation controls when depressed. Stops all motion when released.
7. **WHEEL DRIVE LEVER:** The wheel speed is variable both in forward and reverse. Moving **WHEEL DRIVE** lever to the right causes the tiller to go forward; to the left to back up. The farther the control lever is moved away from the center, the faster the tiller will travel. When the lever is centered, the wheels are locked in a neutral or park position.
8. **TINE DRIVE LEVER:** The tines operate at a constant speed. The Tine Drive lever must be moved all the way over to the forward "ON" position when tilling. If an object becomes lodged in the tines, put the **WHEEL DRIVE** lever in neutral and reverse the tines to dislodge it.
9. **OPERATE TILLER ON LEVEL GROUND ONLY!**
10. **TILLING OPERATION:** In most soil and sod conditions, the depth bar can be set with the pin in the 3rd hole from tip.
 - When starting to till, move the **TINE DRIVE** lever to the forward position.
 - Hold the **CLUTCH LEVER** to the handle grip to engage tines.
 - Move the **WHEEL DRIVE** lever to the right until desired wheel speed is reached.
 - Under most conditions, at least two passes must be made. For deeper tillage, move the depth bar up one hole at a time.